



ADB-11 Installation




Indoor-unit:

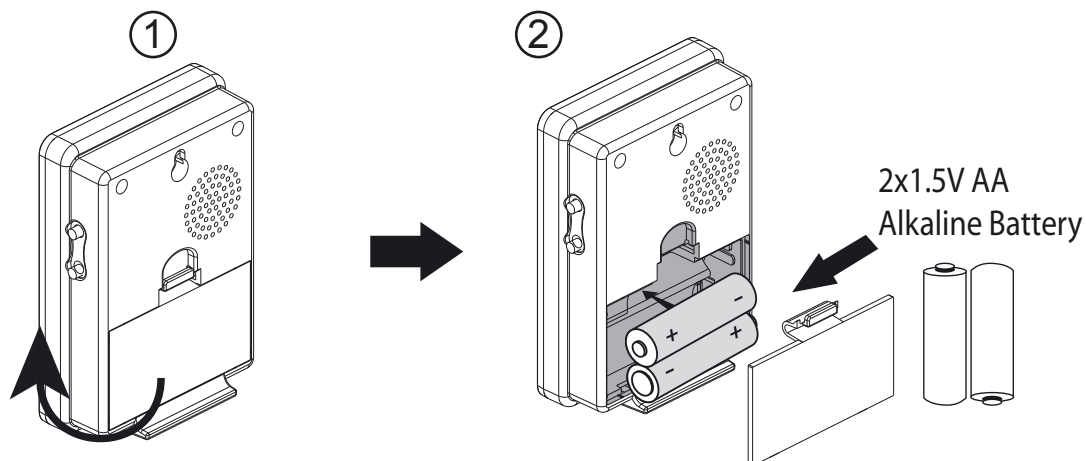

Outdoor-unit:

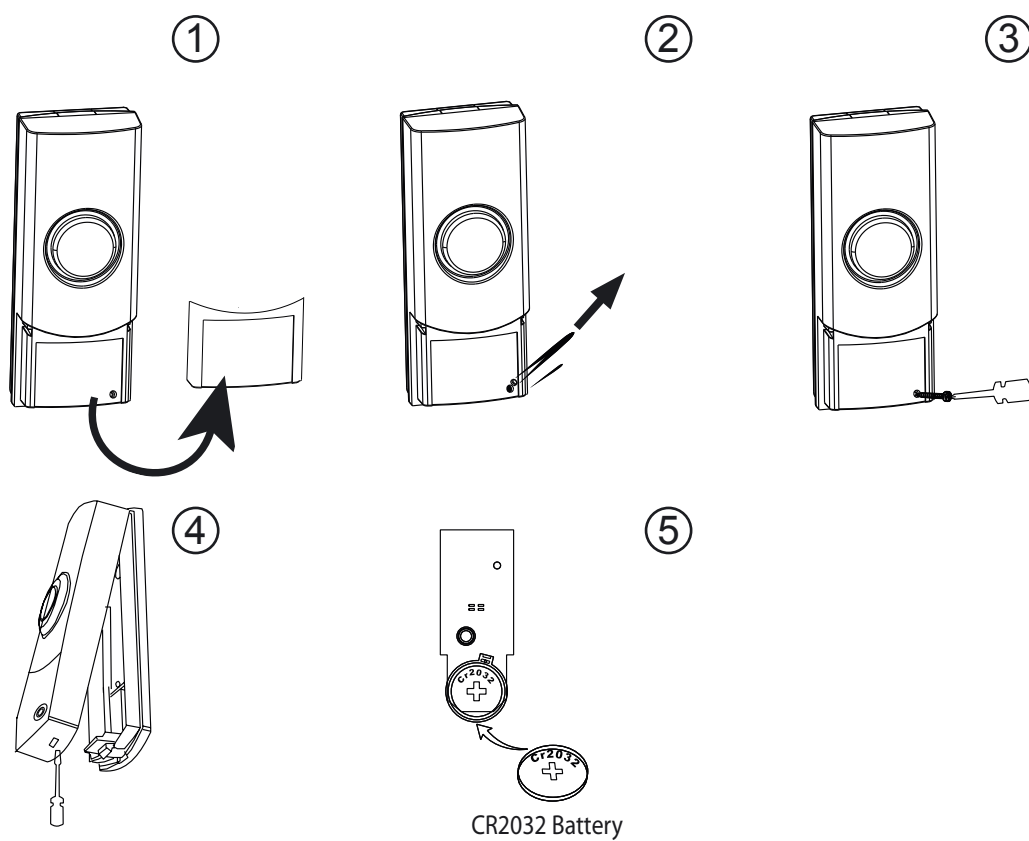

Change melody:

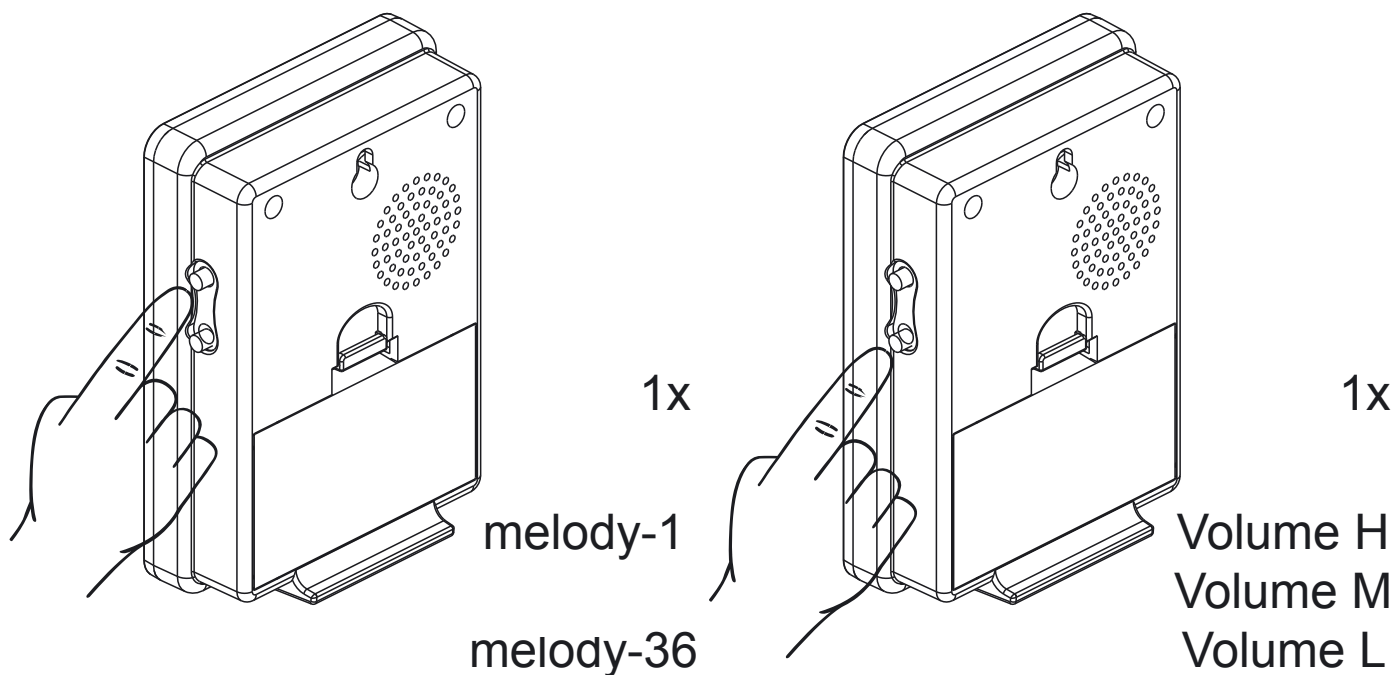







Frequency: 433MHz ASK

Transmission power: <10mW

Declaration of conformity:

<http://DOC.hesdo.com/ADB-11-DOC.pdf>

Service 		 HSC	WWW.ALECTO.NL SERVICE@ALECTO.NL	
Help 			Hesdo, Australiëlaan 1, 5232 BB, 's-Hertogenbosch, The Netherlands	